

Replacing The Batteries



Opening the battery cover:


With the GD-101 face down, holding the GD-101 with both hands turn the back cover counter clock-wise till the cover can no longer turn.



Closing the battery cover:

With the GD-101 face down, holding the GD-101 with both hands turn the back cover clock-wise till the cover can no longer turn.

Package Contents

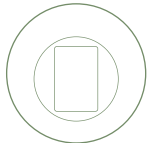

GPS Director GD-101



Quick Start Guide




CD



Lanyard

GPS DIRECTOR

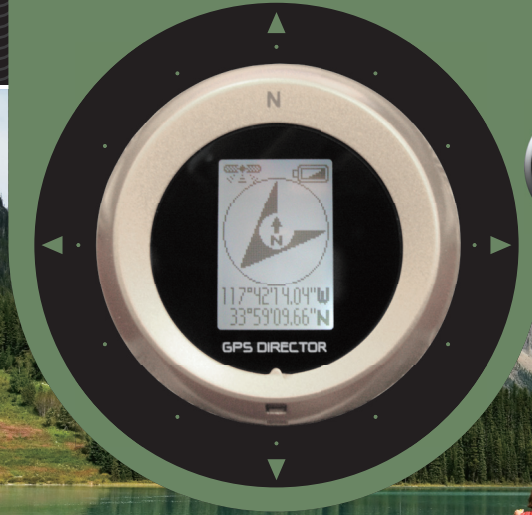

GD-101 QuickStart Guide

Device Introduction



Description	
Info Display	Shows the GPS fix status, power level, heading and distance.
Battery Cover	Open the battery cover by rotating it according to the arrow (counter clock-wise to open/ clock-wise to close).
Power/ Illumination	Press: Turns on backlight. Hold (2sec): 1. Turns the device off. 2. Returns to the last page under each setting screen.
Selection/Setting	Press: To select. Hold (2sec): To set. By holding The Power/Illumination Button and the Selection/ Setting Button at the same time the GD-101 will enter the main settings screen.

Device Operation



Turning the device on/off

You can turn on/off the device by pressing and holding the power button until the device turns on/off



Using the settings button

By holding the Power/Illumination button and the Selection/ Setting button at the same time the GD-101 will enter the settings screen.