

GPS Engine Board

EM-408

Globalsat Technology Corporation

16F., No. 186, Jian-Yi Road, Chung-Ho City, Taipei Hsien 235,
Taiwan

Tel: 886-2-8226-3799/ Fax: 886-2-8226-3899

service@globalsat.com.tw

www.globalsat.com.tw

USGlobalSat, Inc.

14740 Yorba Court, Chino, CA 91710

Tel: 909.597.8525 / Fax: 909.597.8532

oem@usglobalsat.com

www.usglobalsat.com

1. Product Information

- Product Part I.D. **EM-408**
- Product Description

The EM-408 GPS engine board is low cost but maintains high reliability and accuracy making it an ideal choice for integration with OEM/ODM systems. The EM-408 features an integrated patch antenna for complete implementation.


■ Product Features

- ✓ SiRF Star III high performance GPS chipset
- ✓ Very high sensitivity (Tracking Sensitivity: -159dBm)
- ✓ Extremely fast TTFF (Time To First Fix) at low signal levels
- ✓ Supports the NMEA 0183 data protocol
- ✓ Built-in SuperCap to maintain system data for rapid satellite acquisition
- ✓ Built-in patch antenna
- ✓ Foliage Lock for weak signal tracking
- ✓ Compact in size
- ✓ All-in-view 20-channel parallel processing
- ✓ Superior urban canyon performance
- ✓ WAAS / EGNOS support
- ✓ RoHS compliant

■ Product Specifications


| GPS Receiver | |
|---------------------|--|
| Chipset | SiRF Star III/LP Single |
| Frequency | L1, 1575.42 MHz |
| Code | 1.023 MHz chip rate |
| Protocol | Electrical Level: TTL level, Output Voltage Level: 0V~2.85V Baud Rate: 4800 bps ~ 57,600bps (adjustable) Output Message: NMEA 0183 GGA, GSA, GSV, RMC (VTG, GLL optional) |
| Channels | 20 |

| | |
|---------------------------------|---|
| Sensitivity | -159dBm |
| Cold Start | 42 seconds average |
| Warm Start | 38 seconds average |
| Hot Start | 8 second average |
| Reacquisition | 0.1 second average |
| Accuracy | Position: 10 meters, 2D RMS 5 meters, 2D RMS, WAAS enabled Velocity: 0.1 ms Time: 1 μ s synchronized to GPS time |
| Maximum Altitude | 18,000 meters (60,000 feet) max |
| Maximum Velocity | 515 meter/second (1000 knots) max |
| Maximum Acceleration | 4G |
| Datum | WGS-84 |
| Jerk Limit | 20m/sec **3 |
| Physical Characteristics | |
| Dimensions | 1.4" x 1.4" x 0.3" (36.4 x 35.4 x 8.3mm) |
| DC Characteristics | |
| Power Supply | 3.3V DC Input |
| Power Consumption | 44mA (Continuous Mode) 25mA (Trickle Power Mode) |
| Environmental Range | |
| Humidity Range | 5% to 95% non-condensing |
| Operation Temperature | -40F to +185F (-40C to 85C) |

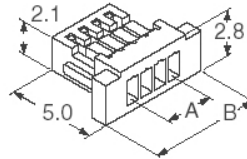

Female Cable Connector

Digi-Key Part No: 455-1380-ND

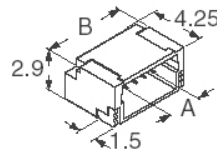


Male PCB Header

Digi-Key Part No: 455-1805-1-ND

■ **Pin Assignment**



- 1: Enable/Disable
- 2: GND
- 3: RX
- 4: TX
- 5: VCC

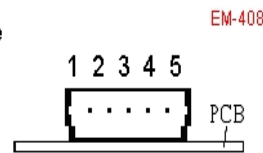

■ **Pin Explanation**

ENABLE/DISABLE: On / Off

VCC: (DC power input) This is the main DC supply for a 3.3V power module board.

TX: This is the main transmit channel for outputting navigation and measurement data to user's navigation software or user-written software.

RX: This is the main receive channel for receiving software commands to the engine board from SiRfDemo software or from user-written software. (**NOTE:** When not in use this pin must be kept "HIGH" for operation. From Vcc connect a 470 Ohm resistor in series with a 3.2v Zener diode to Ground. Then, connect the Rx input to Zener's cathode to pull the input "HIGH".)

GND: GND provides the ground for the engine boards. Be sure to connect all grounds.

■ Mounting

Recommended mounting methods:

- a. Use industrial grade double-sided foam tape. Place it on the bottom side of the engine board.
- b. A recessed cavity in your housing design with a foam pad to eliminate shifting or movement.
- c. Use provided mounting holes on the GPS engine board PCB.

3. Software Commands

■ NMEA Output Command

GGA-Global Positioning System Fixed Data

Table B-2 contains the values for the following example:

\$GPGGA,161229.487,3723.2475,N,12158.3416,W,1,07,1.0,9.0,M,,,0000*18

Table B-2 GGA Data Format

| Name | Example | Units | Description |
|-------------------------------|------------|--------|-----------------------------------|
| Message ID | \$GPGGA | | GGA protocol header |
| UTC Time | 161229.487 | | hhmmss.sss |
| Latitude | 3723.2475 | | ddmm.mmmm |
| N/S Indicator | N | | N=north or S=south |
| Longitude | 12158.3416 | | dddmm.mmmm |
| E/W Indicator | W | | E=east or W=west |
| Position Fix Indicator | 1 | | See Table B-3 |
| Satellites Used | 07 | | Range 0 to 12 |
| HDOP | 1.0 | | Horizontal Dilution of Precision |
| MSL Altitude ¹ | 9.0 | meters | |
| Units | M | meters | |
| Geoid Separation ¹ | | meters | |
| Units | M | meters | |
| Age of Diff. Corr. | | second | Null fields when DGPS is not used |
| Diff. Ref. Station ID | 0000 | | |
| Checksum | *18 | | |
| <CR><LF> | | | End of message termination |

SiRF Technology Inc. does not support geoid corrections. Values are WGS84 ellipsoid heights.

Table B-3 Position Fix Indicator

| Value | Description |
|-------|--|
| 0 | Fix not available or invalid |
| 1 | GPS SPS Mode, fix valid |
| 2 | Differential GPS, SPS Mode , fix valid |
| 3 | GPS PPS Mode, fix valid |

GLL-Geographic Position-Latitude/Longitude

Table B-4 contains the values for the following example:
 \$GPGLL,3723.2475,N,12158.3416,W,161229.487,A*2C

Table B-4 GLL Data Format

| Name | Example | Units | Description |
|---------------|------------|-------|----------------------------------|
| Message ID | \$GPGLL | | GLL protocol header |
| Latitude | 3723.2475 | | ddmm.mmmm |
| N/S Indicator | n | | N=north or S=south |
| Longitude | 12158.3416 | | dddmm.mmmm |
| E/W Indicator | W | | E=east or W=west |
| UTC Position | 161229.487 | | hhmmss.sss |
| Status | A | | A=data valid or V=data not valid |
| Checksum | *2C | | |
| <CR><LF> | | | End of message termination |

GSA-GNSS DOP and Active Satellites

Table B-5 contains the values for the following example:
 \$GPGSA,A,3,07,02,26,27,09,04,15,,,,,1.8,1.0,1.5*33

Table B-5 GSA Data Format

| Name | Example | Units | Description |
|-----------------------------|---------|-------|----------------------------------|
| Message ID | \$GPGSA | | GSA protocol header |
| Mode1 | A | | See Table B-6 |
| Mode2 | 3 | | See Table B-7 |
| Satellite Used ¹ | 07 | | Sv on Channel 1 |
| Satellite Used ¹ | 02 | | Sv on Channel 2 |
| . | | | |
| Satellite Used ¹ | | | Sv on Channel 12 |
| PDOP | 1.8 | | Position dilution of Precision |
| HDOP | 1.0 | | Horizontal dilution of Precision |

| | | | |
|----------|-----|--|--------------------------------|
| VDOP | 1.5 | | Vertical dilution of Precision |
| Checksum | *33 | | |
| <CR><LF> | | | End of message termination |

1. Satellite used in solution.

Table B-6 Mode1

| Value | Description |
|-------|--|
| M | Manual-forced to operate in 2D or 3D mode |
| A | 2D automatic-allowed to automatically switch 2D/3D |

Table B-7 Mode 2

| Value | Description |
|-------|-------------------|
| 1 | Fix Not Available |
| 2 | 2D |
| 3 | 3D |

GSV-GNSS Satellites in View

Table B-8 contains the values for the following example:

\$GPGSV,2,1,07,07,79,048,42,02,51,062,43,26,36,256,42,27,27,138,42*71

\$GPGSV,2,2,07,09,23,313,42,04,19,159,41,15,12,041,42*41

Table B-8 GSV Data Format

| Name | Example | Units | Description |
|---------------------------------|---------|---------|-------------------------------------|
| Message ID | \$GPGSV | | GSV protocol header |
| Number of Messages ¹ | 2 | | Range 1 to 3 |
| Message Number ¹ | 1 | | Range 1 to 3 |
| Satellites in View | 07 | | |
| Satellite ID | 07 | | Channel 1(Range 1 to 32) |
| Elevation | 79 | degrees | Channel 1(Maximum90) |
| Azimuth | 048 | degrees | Channel 1(True, Range 0 to 359) |
| SNR(C/No) | 42 | dBHz | Range 0 to 99,null when not tracked |
| | | | |
| Satellite ID | 27 | | Channel 4 (Range 1 to 32) |
| Elevation | 27 | Degrees | Channel 4(Maximum90) |
| Azimuth | 138 | Degrees | Channel 4(True, Range 0 to 359) |
| SNR(C/No) | 42 | dBHz | Range 0 to 99,null when not tracked |
| Checksum | *71 | | |
| <CR><LF> | | | End of message termination |

Depending on the number of satellites tracked multiple messages of GSV data may be required.

RMC-Recommended Minimum Specific GNSS Data

Table B-9 contains the values for the following example:

\$GPRMC,161229.487,A,3723.2475,N,12158.3416,W,0.13,309.62,120598,,*10

Table B-9 RMC Data Format

| Name | Example | Units | Description |
|---------------------------------|------------|---------|----------------------------------|
| Message ID | \$GPRMC | | RMC protocol header |
| UTC Time | 161229.487 | | hhmmss.sss |
| Status | A | | A=data valid or V=data not valid |
| Latitude | 3723.2475 | | ddmm.mmmm |
| N/S Indicator | N | | N=north or S=south |
| Longitude | 12158.3416 | | dddmm.mmmm |
| E/W Indicator | W | | E=east or W=west |
| Speed Over Ground | 0.13 | knots | |
| Course Over Ground | 309.62 | degrees | True |
| Date | 120598 | | ddmmyy |
| Magnetic Variation ² | | degrees | E=east or W=west |
| Checksum | *10 | | |
| <CR><LF> | | | End of message termination |

SiRF Technology Inc. does not support magnetic declination. All “course over ground” data are Geodetic WGS48 directions.

VTG-Course Over Ground and Ground Speed

\$GPVTG,309.62,T,,M,0.13,N,0.2,K*6E

Table B-9 VTG Data Format

| Name | Example | Units | Description |
|------------|---------|---------|----------------------------|
| Message ID | \$GPVTG | | VTG protocol header |
| Course | 309.62 | degrees | Measured heading |
| Reference | T | | True |
| Course | | degrees | Measured heading |
| Reference | M | | Magnetic |
| Speed | 0.13 | knots | Measured horizontal speed |
| Units | N | | Knots |
| Speed | 0.2 | Km/hr | Measured horizontal speed |
| Units | K | | Kilometers per hour |
| Checksum | *6E | | |
| <CR><LF> | | | End of message termination |

■ NMEA Input Command**A.) Set Serial Port ID:100 Set PORTA parameters and protocol**

This command message is used to set the protocol (SiRF Binary, NMEA, or USER1) and/or the communication parameters (baud, data bits, stop bits, parity). Generally, this command is utilized to switch the GPS module back to SiRF Binary protocol mode, where an extensive message commands are readily available. In example, whenever users are interested in altering navigation parameters, a valid message sent and is received by the recipient module, the new parameters will be stored in battery backed SRAM and then the receiver will restart using the saved parameters.

Format:

\$PSRF100,<protocol>,<baud>,<DataBits>,<StopBits>,<Parity>*CKSUM
<CR><LF>

| | |
|------------|--|
| <protocol> | 0=SiRF Binary, 1=NMEA, 4=USER1 |
| <baud> | 1200, 2400, 4800, 9600, 19200, 38400 |
| <DataBits> | 8,7. Note that SiRF protocol is only valid for 8 Data bits |
| <StopBits> | 0,1 |
| <Parity> | 0=None, 1=Odd, 2=Even |

Example 1: Switch to SiRF Binary protocol at 9600,8,N,1

\$PSRF100,0,9600,8,1,0*0C<CR><LF>

Example 2: Switch to User1 protocol at 38400,8,N,1

\$PSRF100,4,38400,8,1,0*38<CR><LF>

**Checksum Field: The absolute value calculated by exclusive-OR the 8 data bits of each character in the Sentence, between, but, excluding "\$" and "*". The hexadecimal value of the most significant and least significant 4 bits of the result are converted to two ASCII characters (0-9,A-F) for transmission. First, the most significant character is transmitted.

**<CR><LF> : Hex 0D 0A

B.) Navigation initialization ID:101 Parameters required for start

This command is used to initialize the GPS module for a "Warm" start, by providing real-time position (in X, Y, Z coordinates), clock offset, and time. This action enables the GPS receiver to search for the necessary satellite signals at the correct signal parameters. The newly acquired and stored satellite data will enable the receiver to acquire signals more quickly, and thus, generate a rapid navigational solution.

When a valid Navigation Initialization command is received, the receiver will restart using the input parameters as a basis for satellite selection and acquisition.

Format

\$PSRF101,<X>,<Y>,<Z>,<ClkOffset>,<TimeOfWeek>,<WeekNo>,<chnlCount>,<ResetCfg>
*CKSUM<CR><LF>

| | |
|-----|--------------------------------|
| <X> | X coordinate position INT32 |
|-----|--------------------------------|

| | |
|---------------------------|---|
| <Y> | Y coordinate position INT32 |
| <Z> | Z coordinate position INT32 |
| <ClkOffset> available. | Clock offset of the receiver in Hz, Use 0 for last saved value if available. If this is unavailable, a default value of 75000 for GSP1, 95000 for GSP 1/LX is used. INT32 |
| <TimeOf Week> | GPS Time Of Week UINT32 |
| <WeekNo> | GPS Week Number UINT16 Week No and Time Of Week calculation from UTC time |
| <chnlCount> | Number of channels to use.1-12. If your CPU throughput is not high enough, you could decrease needed throughput by reducing the number of active channels UBYTE |
| <ResetCfg> | bit mask 0x01=Data Valid warm/hotstarts=1 0x02=clear ephemeris warm start=1 0x04=clear memory. Cold start=1 UBYTE |

Example: Start using known position and time.

\$PSRF101,-2686700,-4304200,3851624,96000,497260,921,12,3*7F

C.) Set DGPS Port ID:102 Set PORT B parameters for DGPS input

This command is used to control Serial Port B, an input serial only port used to receive RTCM differential corrections. Differential receivers may output corrections using different communication parameters. The default communication parameters for PORT B are set for 9600 Baud, 8data bits, 0 stop bits, and no parity. If a DGPS receiver is used which has different communication parameters, use this command to allow the receiver decode data correctly. When a valid message is received, the parameters are stored in a battery backed SRAM. Resulting, GPS receiver using the saved Parameters for restart.

Format:

\$PSRF102,<Baud>,<DataBits>,<StopBits>,<Parity>*CKSUM<CR><LF>

| | |
|------------|---------------------------------|
| <baud> | 1200,2400,4800,9600,19200,38400 |
| <DataBits> | 8 |
| <StopBits> | 0,1 |
| <Parity> | 0=None,Odd=1,Even=2 |

Example: Set DGPS Port to be 9600,8,N,1

\$PSRF102,9600,8,1.0*12

D.) Query/Rate Control ID:103 Query standard NMEA message and/or set output rate

This command is used to control standard NMEA data output messages: GGA, GLL, GSA, GSV, RMC, and VTG. Using this command message, standard NMEA message is polled once, or setup for periodic output. In addition, checksums may also be enable or disable contingent on receiving program requirements. NMEA message settings are stored in a battery-backed memory for each entry when the message is accepted.

Format:

\$PSRF103,<msg>,<mode>,<rate>,<cksumEnable>*CKSUM<CR><LF>

| | |
|---------------|--|
| <msg> | 0=GGA,1=GLL,2=GSA,3=GSV,4=RMC,5=VTG |
| <mode> | 0=SetRate,1=Query |
| <rate> | Output every <rate>seconds, off=0,max=255 |
| <cksumEnable> | 0=disable Checksum,1=Enable checksum for specified message |

Example 1: Query the GGA message with checksum enabled

\$PSRF103,00,01,00,01*25

Example 2: Enable VTG message for a 1Hz constant output with checksum enabled

\$PSRF103,05,00,01,01*20

Example 3: Disable VTG message

\$PSRF103,05,00,00,01*21

E.) LLA Navigation initialization ID:104 Parameters required to start using Lat/Lon/Alt

This command is used to initialize the GPS module for a "Warm" start, providing real-time position (Latitude, Longitude, Altitude coordinates), clock offset, and time. This action enables the GPS receiver to search for the necessary satellite signals at the correct signal parameters. The newly acquired and stored satellite data will enable the receiver to acquire signals more quickly, and thus, generate a rapid navigational solution.

When a valid LLA Navigation Initialization command is receive, then the receiver will restart using the input parameters as a basis for satellite selection and acquisition.

Format:

\$PSRF104,<Lat>,<Lon>,<Alt>,<ClkOffset>,<TimeOfWeek>,<WeekNo>,<ChannelCount>,<ResetCfg>*CKSUM<CR><LF>

| | |
|-------|--|
| <Lat> | Latitude position, assumed positive north of equator and negative south of equator float, possibly signed |
| <Lon> | Longitude position, it is assumed positive east of Greenwich and negative west of Greenwich Float, possibly signed |
| <Alt> | Altitude position float, possibly signed |

| | |
|-----------------------------------|--|
| <code><ClkOffset></code> | Clock Offset of the receiver in Hz, use 0 for last saved value if available. If this is unavailable, a default value of 75000 for GSP1, 95000 for GSP1/LX is used. INT32 |
| <code><TimeOfWeek></code> | GPS Time Of Week UINT32 |
| <code><WeekNo></code> | GPS Week Number UINT16 |
| <code><ChannelCount></code> | Number of channels to use. 1-12 UBYTE |
| <code><ResetCfg></code> | bit mask 0x01=Data Valid warm/hot starts=1 0x02=clear ephemeris warm start=1 0x04=clear memory. Cold start=1 UBYTE |

Example: Start using known position and time.

```
$PSRF104,37.3875111,-121.97232,0,96000,237759,922,12,3*37
```

F.) Development Data On/Off ID:105 Switch Development Data Messages On/Off

Use this command to enable development debug information if you are having trouble in attaining commands accepted. Invalid commands will generate debug information that should enable the user to determine the source of the command rejection. Common input rejection problems are associated to invalid checksum or parameter out of specified range. Note, this setting is not preserved across a module reset.

Format: \$PSRF105,<debug>*CKSUM<CR><LF>

<debug> 0=Off,1=On

Example: Debug On \$PSRF105,1*3E

Example: Debug Off \$PSRF105,0*3F

G). Select Datum ID:106 Selection of datum to be used for coordinate transformations

GPS receivers perform initial position and velocity calculations using an earth-centered earth-fixed (ECEF) coordinate system. Results may be converted to an earth model (geoid) defined by the selected datum. The default datum is WGS 84 (World Geodetic System 1984) which provides a worldwide common grid system that may be translated into local coordinate systems or map Datum. (Local map Datum are a best fit to the local shape of the earth and not valid worldwide.)

Examples:

Datum select TOKYO_MEAN

```
$PSRF106,178*32
```

| Name | Example | Units | Description |
|------------|-----------|-------|--|
| Message ID | \$PSRF106 | | PSRF106 protocol header |
| Datum | 178 | | 21= WGS84 178= Tokyo_Mean 179= Tokyo_Japan 180= Tokyo_Korea 181= Tpkyo_Okinawa |
| Checksum | *32 | | |
| <CR><LF> | | | End of message termination |

* * *